

Montageanleitung Kopfstütze für BodyLink-Sitz

Verwendungszweck:

Die verstellbare Kopfstütze ist zur Montage an BodyLink-Sitzen von HP Velotechnik bestimmt.

Inhalt


- 1x Kopfstütze Unterteil
- 1x Kopfstütze Oberteil
- 1x Scheibe 6,4, Messing (o. Abb.)
- 1x Polsterkissen
- 1x Rändelmutter Kunststoff (o. Abb.)
- 1x Halbrundkopfschraube M6 x 20 (o. Abb.)
- 2x Senkschrauben M6 x 14
- 2x Senkschrauben M6 x 16
- 2x DIN125 Scheiben 10,5

Montage / Einstellung:

Nehmen Sie den oberen Teil des Sitzpolsters ab. Die Kopfstütze wird in den beiden Gewindeeinsätzen (10) im oberen Teil (11) des Sitzes verschraubt. Setzen Sie die Schrauben M6 durch den Schlitz im unteren Teil der Kopfstütze an. Verwenden Sie die Scheiben DIN125 mit Durchmesser 10,5 mm unter den Schraubenköpfen der Senkschrauben M6 x 12 (7). Bei älteren Sitzmodellen (Typ 1) kommen die längeren Schrauben M6 x 16 (8) zum Einsatz.

Zum Einstellen der Höhe lösen Sie die beiden Schrauben (7) bzw. (8) und schieben die Kopfstütze rauf oder runter. Zum Einstellen des Winkels lösen Sie die Rändelmutter (unter dem Polsterkissen (4)). Nach dem Einstellvorgang ziehen Sie alle Schrauben wieder fest.

Achtung! Das Rad nicht an der Kopfstütze schieben!

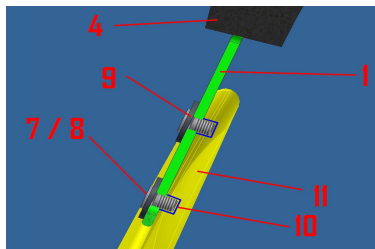

Mounting instructions Head rest for BodyLink-seat

Intended use:

The adjustable head rest is designed for use with BodyLink-seats from HP Velotechnik.

Content

- 1x head rest lower part
- 1x head rest upper part
- 1x washer, brass, 6,4 mm (not in picture)
- 1x padding
- 1x knurled screw (not in picture)
- 1x round head bolt M6 x 20
- 2x counter sunk bolt M6 x 14
- 2x counter sunk bolt M6 x 16
- 2x DIN125 washer 10,5

Mounting / adjustment:

Remove the upper part of the seat cushion. The headrest will be mounted into the threatened inserts (10) in the top of the upper part (11) of the seat.

Put the bolts M6 x 12 (7) (resp. M6 x 16 (8) on older seat versions) through the slot in the head rest lower part (1). Under the bolt heads of the countersunk bolts, use the washers DIN125 10,5 (9).

To adjust the head rest, height, loosen the bolts (7), resp. (8) and move the head rest up and down.

To adjust the angle, loosen the knurled screw (5) under the padding (4).

After adjusting tighten all bolts.

Caution: Do not push or pull the bike on the head rest!