

## Montageanleitung HP VELOTECHNIK Side Bag Mount für Gekkos



### Beschreibung

Die Side Bag Mounts ermöglichen die seitliche Anbringung von (Lenker-) Taschen und anderem Zubehör für direkten Zugriff auch während der Fahrt. Sie werden an den Sitzstreben des Rahmens befestigt und sind in Neigung und Breite einstellbar. Die Side Bag Mounts dürfen pro Seite mit bis zu 5 Kilogramm belastet werden, die maximal zugelassene Gesamtzuladung für das Liegerad erhöht sich durch die Anbringung der Side Bag Mounts nicht.

Side Bag Mounts sind geeignet für die Modelle Gekko, Gekko 26, Gekko fx 20 und Gekko fx 26. Die faltbarkeit wird von den Side Bag Mounts nicht eingeschränkt, jedoch sind die Rollen am Sitz als Ziehhilfe für das gefaltete Rad nicht mehr nutzbar.

Side Bag Mounts können von Endverbrauchern montiert werden.

### Inhalt

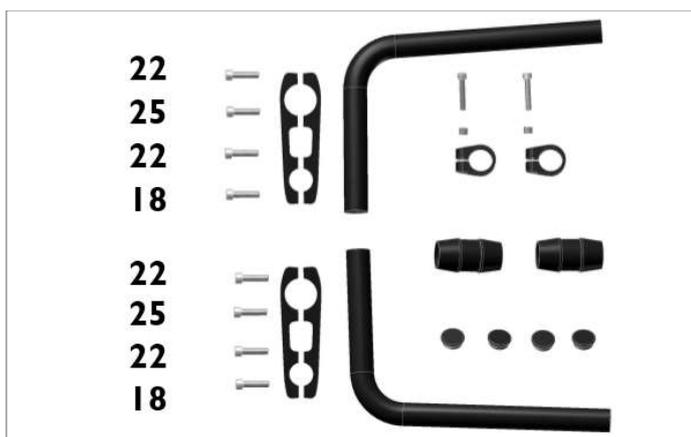


Abb. 2 Mitgelieferte Teile, die Zahlen geben die Schraubenlänge in mm an.

- 2 Halterohre
- 2 Klemmen (je zweiteilig)
- 2 Stützhülsen (je zweiteilig)
- 2 Klemmschellen für Lenkerdurchmesser 22,2mm
- 4 Lenkerstopfen
- 2 Zylinderkopfschrauben M6 x 25
- 4 Zylinderkopfschrauben M6 x 22
- 2 Zylinderkopfschrauben M6 x 18
- 2 Zylinderkopfschrauben M5 x 30
- 2 Distanzbuchsen

### Montage

Unter der Sitzfläche befinden sich 2 Sitzstreben (Fig. 3).

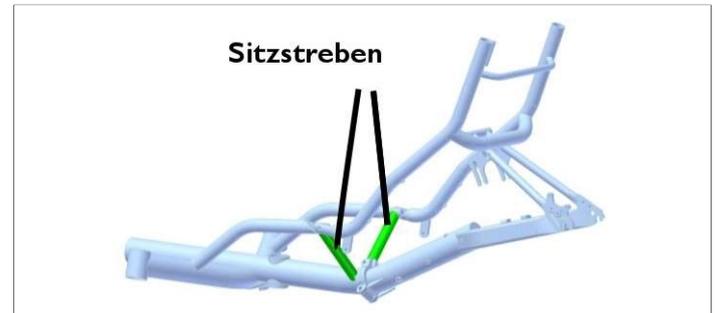


Abb. 3: Die Side Bag Mounts werden an die Sitzstreben montiert.

Legen Sie die Stützhülsen um die Sitzstreben und befestigen Sie sie mit der Klemme. Wählen Sie die Schraubenlänge wie in Abb. 2 angegeben. Die Halterohre müssen bündig in die Klemmen montiert werden oder darüber hinausragen.



Abb. 4: Montage von Stützhülse, Klemme und Halterrohr. Blick von schräg hinten auf die rechte Sitzstrebe, das Halterrohr zeigt zum Hinterrad.

Abb. 5: Detailbild: Montieren Sie das Halterrohr (im Detailbild grau) bündig in die Klemme (schwarz) oder lassen Sie es aus der Klemme herausragen.

Setzen Sie sich auf den Sitz und überprüfen Sie die Position der Halterohre. Sie können sie durch Verschieben der Montageposition, Änderung der Montagewinkel und durch Kürzen der Halterohre nach Ihren Wünschen anpassen.

Achten Sie darauf, dass der Lenkeinschlag nicht beeinträchtigt wird. Der Zugang zu Anbauteilen wie Akku oder Gehilfenhalter soll gewährleistet sein und die Einstellungsmöglichkeit der Sitzneigung soll erhalten bleiben.

Zum Kürzen der Halterohre verwenden Sie eine Metallsäge oder einen Rohrschneider und entgraten im Anschluss die Rohrende mit einer Feile.

Ziehen Sie die Schrauben fest (9–11 Nm). Verschließen Sie die Enden der Halterohre mit den beiliegenden Lenkerendstopfen. Befestigen Sie die Klemmschellen mit Distanzhülsen unter den Befestigungsschrauben. Sie dienen als Befestigungshilfe für Lenkertaschen.



Abb. 6: Montage von Klemmschelle und Lenkerendstopfen

## Mounting Instructions HP VELOTECHNIK Side Bag Mount for Gekkos



Fig. 1: Gekko fx 20 with Side Bag Mounts and handlebar bags. The handlebar bags are not included.

### Description

The Side Bag Mounts allow the side attachment of (handlebar) bags and other accessories for direct access even while driving. They are attached to the seat stays of the frame and can be adjusted in angle and width. The Side Bag Mounts may carry a load up to 5 kilograms per side, the maximum permitted total load for the trike is not increased by mounted Side Bag Mounts.

Side bag mounts are suitable for the models Gekko, Gekko 26, Gekko fx 20 and Gekko fx 26. The folding ability is not restricted by the Side Bag Mounts, but the rollers on the seat can no longer be used to move around the trike in folded condition. Side Bag Mounts can be mounted by customers.

### Content



Fig. 2: Supplied parts, the numbers indicate the screw length in mm

- 2 holder tubes
- 2 frame clamps (each in 2 parts)
- 2 adapter sleeves (each in 2 parts)
- 2 clamps for pipe diameter 22,2mm
- 4 end caps
- 2 cylinder head screws M6 x 25
- 4 cylinder head screws M6 x 22
- 2 cylinder head screws M6 x 18
- 2 cylinder head screws M5 x 30
- 2 spacer bushings

### Mounting

Under the seat there are 2 seat stays

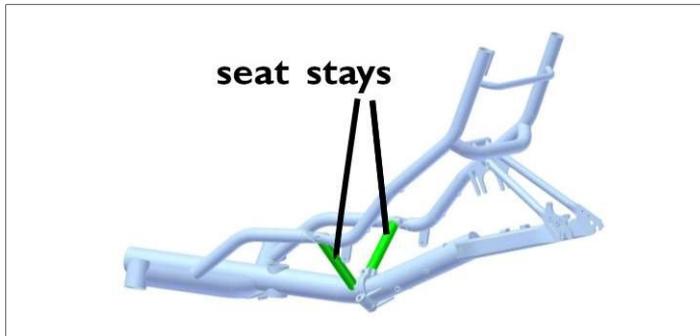


Fig. 3: The Side Bag Mounts are attached to the seat stays.

Place the adapter sleeves around the seat stays and fasten them with the frame clamp. Select the screw length as shown in Fig. 2. The holder tubes must be mounted flush with the clamps or protrude beyond them.



Fig. 4: Assembly of adapter sleeve, frame clamp and holder tube. View on the right seat stay from diagonally behind, the holder tube points to the rear wheel.

Fig. 5: Detail picture: Mount the holder tube (grey in the detail picture) flush with the clamp (black) or beyond.

Sit on the seat and check the position of the holder tubes. You can adjust them to your requirements by shifting the mounting position, changing the mounting angles and shortening the holder tubes.

Make sure that the steering is not affected. Access to accessories such as the battery or walking aid holder should be guaranteed and the seat angle adjustment option should be preserved. For shortening use a metal saw or a pipe cutter. Deburr the pipe end with a file.

Tighten the screws (9–11 Nm). Close the ends of the holder tubes with the enclosed end caps. Fasten the clamps with spacer bushings under the fastening screws. They serve as a mounting aid for handlebar bags.



Fig. 6: Mounting of the clamp and end caps on the holder tube.